
Royal Cabinet Manufacturer LLC

SPC VINYL TILE

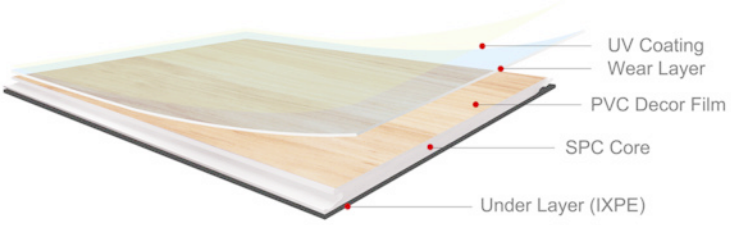




Preparation

Maintain room temperature at 57F before installation
The floor surface must be clean, solid, and free of any debrise
The surface must be flat and leveled, use scrapers and putty knife to smooth out the surface
It is advisable to use self leveling cement to level and smooth out your floor.


Installtion instruction for click flooring




Start at a corner.
Place first plank with tongue side facing wall.
Use spacers to maintain an expansion space of 2-3 mm between wall and flooring.

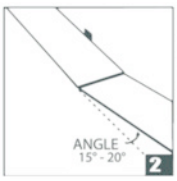


Insert 2nd plank's end tongue to 1st plank's end groove at an angle of 15° to 20°.
The plank will click into place when lowered.
Line up edges carefully.
Planks should be flat to the floor.

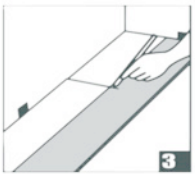


For the last plank of a row, flip a full plank to its under side and place beside the row.
Measure and mark the required length.
Use a ruler and utility knife to score the plank and snap off.
Insert as previous diagram.

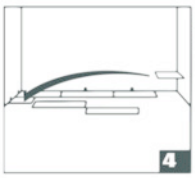

Begin next row with the last cut off piece from the previous row to stagger the pattern.

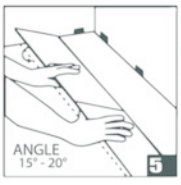

To start second row, assemble your entire row on the subfloor before attaching it to the first row.
To attach, tilt and push the side tongue into the side groove of the first row at an angle of 15° to 20°.
Lower and click into place lining the edges up carefully.
Continue laying remaining planks in this matter.

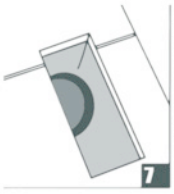

Heating vents require expansion room.
First, cut plank to the correct length.
Place the cut plank at its actual position and use a ruler to measure the areas to be cut out and mark them.
Cut out the marked points allowing the neccessary expansion distance.




To fit the final row, lay a plank upside down on the flooring as per diagram with the tongue side close to the wall.
Take another plank and place it right on top of the previous row and use it as a ruler.
Don't forget to allow room for spacers.
Cut the plank and attach into position.



The gap between the bottom of a door and the vinyl flooring should be 1 cm height.
To trim door frames, turn a plank upside down.
Place it next to the door frame as per diagram.
Use a handsaw and cut away the neccessary height so that the planks can slide easily underneath the frame.

SPC flooring Spec

Total Thickness	6.5mm
SPC core thickness	5.0mm
Wear Layer	0.5mm
IPXE underlayment	1.0mm

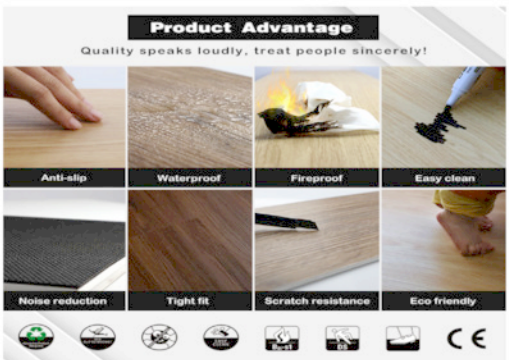




SPC-XJ82001-7


SPC-LQ6260-US


SPC-XJ82002-1A


SPC-XJ82001-1A


SPC-1028-18


SPC-YMD30